

QUICK REFERENCE GUIDE

OLYMPUS

Olympus America Inc.
2 Corporate Center Drive
Melville, NY 11747
www.olympusamerica.com

Olympus Data Projector VP-1

This document will help guide you through using a notebook computer with the projector. For comprehensive usage instructions, please refer to the documentation located on the CD-ROM.

 
1. Before you begin your presentation, please gather the following items:




Projector




Power cable



RGB signal cable

 


15-pin adapter

 

Remote control


2. Setting up your projector.

 A. Connect the video cables as shown in the diagram below:

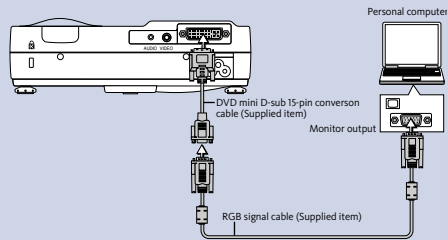

B. Connect the Power cable to the projector. The power indicator will light amber.

 C. Press the POWER button for 1 second to turn on the projector. You will see the lights follow this sequence:



! If the projector is turned on/off too quickly, the status indicator may begin blinking red. Please wait 30 seconds and then press the POWER button again.

3. Setting up your computer.

A. Turn on the computer. The projector should automatically detect the computer as a video source.

B. If the projector continues to search, you may need to activate your computer's external monitor function. For example, use the key combinations listed in the chart below:

| Manufacturer | Key | Manufacturer | Key |
|--------------|----------|--------------|----------|
| Akia | Fn + F2 | IBM | Fn + F7 |
| Apple | See ** | NEC | Fn + F3 |
| Compaq | Fn + F4 | Panasonic | Fn + F3 |
| Dell | Fn + F8 | Sharp | Fn + F5 |
| Epson | Fn + F8 | Sony | Fn + F7 |
| Fujitsu | Fn + F10 | Sotec | Fn + F3 |
| Gateway | Fn + F3 | Toshiba | Fn + F5 |
| Iiyama | Fn + F3 | Victor | Fn + F10 |

** For Apple PowerBook, please see instructions on "Mirror Display" or "Make Duplicate Monitors"

 
For computer models not listed, please refer to your computer's User Guide for information on how to activate an external monitor.

C. If the projector still does not detect the computer video, try the following:

- Reset the projector. Press MENU, select "Info", and then "Factory Default".
- Set your display resolution to 1024 x 768.
- Disconnect, straighten, and then reconnect the video cable.

4. Adjusting the projected image.

A. To align the image with your screen, raise or lower the projectors front and rear height adjusters.

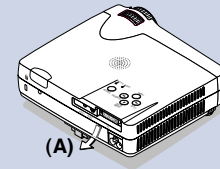

B. Adjust the zoom.

C. Adjust the focus.

Fine adjust

Quick adjust

! Care must be taken not to come into contact with the ventilation slots which discharge the heat of the lamp.

 
5. Perfecting the image using the Quick Menu.

! Tip: If the image appears distorted, you may need to RESET the image settings. Press MENU. Select "Info", then "Factory Default".

You can use the QUICK MENU to optimize the displayed image for your presentation.

A. Press the QUICK MENU button on the projector or the "QUICK" button on the Remote Control. Settings can be changed by pressing the right or left

Example: Brightness adjustment display



| Display Item | Adjustment Setting |
|--------------------|--|
| Brightness | Adjusts the brightness of the image. Brightness decreases in the (-) direction and increases in the (+) direction. |
| Contrast | Adjusts the contrast of the image. Contrast becomes less distinct in the (-) direction and more pronounced in the (+) direction. |
| V Keystone | Corrects (vertical) keystone distortion of the screen. Adjusts the left and right edges of the screen so that they are parallel. |
| H Keystone | Corrects (horizontal) keystone distortion of the screen. Adjusts the top and bottom edges of the screen so that they are parallel. |
| Picture-in-Picture | The picture from the VIDEO jack is displayed as a sub-picture on the input screen from the PC connector. This function selects either the size of the sub-picture. |
| Volume | This function adjusts the volume of the built-in speaker. The volume decreases in the (-) direction and increases in the (+) direction. |
| Quick Color Adj. | Selects a preset color mode or creates a custom color mode. Used to adjust Gamma, Color Temperature, and White Emphasis. |

 
6. When you are finished.

A. Press the POWER button for 1 second.

B. The Power indicator will blink for 90 seconds.

! Do not disconnect the power cable at this time.

C. When the Power indicator is lit solid amber, you can unplug the projector power.



D. Disconnect the video and power cables.

Technical Assistance:

Olympus Digital Technical Support
(800) 798-2777 toll-free hotline
Mon. - Fri., 8 AM to 10 PM Eastern Time
E-mail: distec@olympus.com
Website: www.olympusamerica.com

For supplies and accessories:

Olympus Emporium
www.olympusamerica.com/store
(800) 201-7766

VT818401