


OLYMPUS

DIGITAL CAMERA

FE-5050/FE-4050

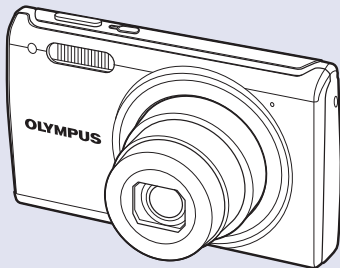

EN Quick Start Guide

VR111601
1AG6P1P5966--

EN

Thank you for purchasing an Olympus digital camera.

Please read these instructions carefully.


Unless otherwise specified, the explanation about these illustrations is provided for FE-5050.

The camera you purchased is provided with the CD-ROM Instruction Manual.

For detailed information on all features and Provisions of warranty, please refer to the CD-ROM.

Adobe Reader is required to view the Instruction Manual.

Contents of the box / Vérifier le contenu de la boîte / Comprobación de los contenidos de la caja

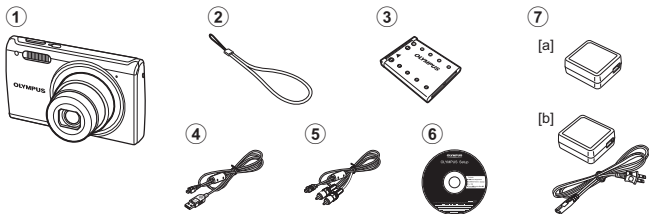


	EN	FR	ES
①	Digital camera	Appareil photo numérique	Cámara digital
②	Strap	Courroie	Correa
③	LI-42B Lithium Ion Battery	Batterie lithium-ion LI-42B	Batería de ion de litio LI-42B
④	USB cable	Câble USB	Cable USB
⑤	AV cable	Câble AV	Cable AV
⑥	OLYMPUS Setup CD-ROM	OLYMPUS Setup CD-ROM	OLYMPUS Setup CD-ROM
⑦	F-2AC USB-AC adapter ([a] or [b])	Adaptateur secteur USB F-2AC ([a] ou [b])	Adaptador USB de CA F-2AC ([a] o [b])


EN Other accessories not shown: warranty card
Contents may vary depending on purchase location.

FR Autres accessoires non illustrés : carte de garantie
Le contenu est susceptible de varier en fonction du lieu d'achat.


ES Otros accesorios no mostrados: tarjeta de garantía
Los contenidos pueden variar dependiendo del lugar de la compra.

 
 
 
 


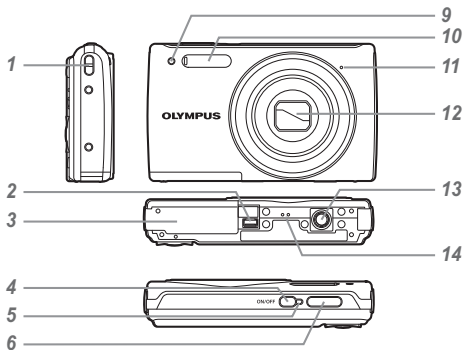

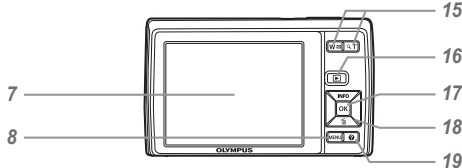
 


Names of Parts / Nomenclature des pièces / Nombres de las piezas

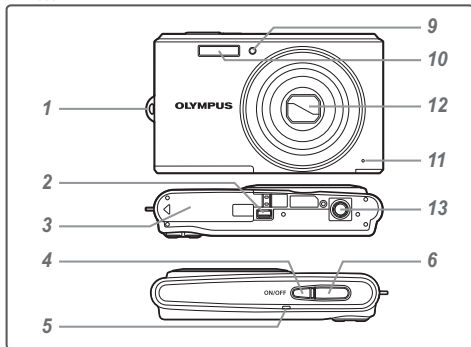



FE-4050





EN	FR	ES
1 Strap eyelet	1 Œillet de courroie	1 Enganche para correa
2 Multi-connector	2 Connecteur multiple	2 Multiconector
3 Battery/card compartment cover	3 Couvercle du compartiment de la batterie/carte	3 Tapa del compartimento de la batería/tarjeta
4 ON/OFF button	4 Touche ON/OFF	4 Botón ON/OFF
5 Indicator lamp	5 Voyant	5 Indicador de luz
6 Shutter button	6 Déclencheur	6 Botón disparador
7 Monitor	7 Écran ACL	7 Monitor
8 MENU button	8 Touche MENU	8 Botón MENU
9 Self-timer lamp	9 Voyant du retardateur	9 Luz del disparador automático
10 Flash	10 Flash	10 Flash
11 Microphone	11 Microphone	11 Micrófono
12 Lens	12 Objectif	12 Objetivo
13 Tripod socket	13 Embase fileté pour trépied	13 Rosca de trípode
14 Speaker	14 Haut-parleur	14 Altavoz
15 Zoom buttons	15 Touches de zoom	15 Botones del zoom
16  button (switch between shooting and playback)	16 Touche  (bascule entre la prise de vue et l'affichage)	16 Botón  (cambia entre toma y reproducción)
17  button (OK)	17 Touche  (OK)	17 Botón  (OK)
18 INFO button (change information display)	18 Touche INFO (modification de l'affichage d'informations)	18 Botón INFO (cambiar pantalla de información)
 button (erase)	18 Touche  (effacement)	18 Botón  (borrar)
19  button (menu guide)	19 Touche  (guide de menu)	19 Botón  (guía de menús)

EN Preparing the Camera

Inserting the battery and the SD/SDHC memory card (sold separately)

- Always use SD/SDHC memory cards with this camera. Do not insert any other types of memory card.

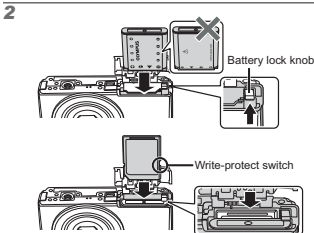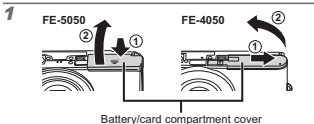

- Insert the battery by putting in the ▼ marked side first, with the ● marks toward the battery lock knob. Damage to the battery exterior (scratches, etc.) may produce heat or an explosion.
- Turn off the camera before opening the battery/card compartment cover.
- When using the camera, be sure to close the battery/card compartment cover.
- Insert the card straight until it clicks into place.
- Do not touch the contact area directly.



Charging the battery and setting up using the supplied CD

Connect the camera to the computer to charge the battery and use the supplied CD for setup.

- User registration using the supplied CD and installation of its computer software is available on Windows computers only.

The camera battery can be charged while the camera is connected to a computer.

Windows

- We recommend that you use a computer equipped with Windows XP (Service Pack 2 or later), Windows Vista, or Windows 7.

1 Insert the supplied CD in a CD-ROM drive.

Windows XP

- A "Setup" dialog will be displayed.


Windows Vista/Windows 7

- An Autorun dialog will be displayed. Click "OLYMPUS Setup" to display the "Setup" dialog.
- If the "Setup" dialog is not displayed, select "My Computer" (Windows XP) or "Computer" (Windows Vista/Windows 7) from the start menu. Double-click the CD-ROM (OLYMPUS Setup) icon to open the "OLYMPUS Setup" window and then double-click "SETUP.EXE".
- If a "User Account Control" dialog is displayed, click "Yes" or "Continue".

2 Follow the on-screen instructions on your computer.

- If nothing is displayed on the camera screen even after connecting the camera to the computer, the battery may be exhausted. Leave the camera connected to the computer until the battery has charged, then disconnect and reconnect the camera.

Connecting the camera

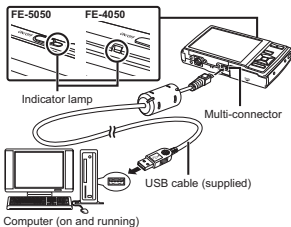

- When the camera is connected to another device via USB, a message will be displayed prompting you to choose a connection type. Select [STORAGE].

3 Register your Olympus product.

- Click the "Registration" button and follow the on-screen instructions.

4 Install the camera manual.

- Click the "Camera Instruction Manual" button and follow the on-screen instructions.

Macintosh

- Mac OS X v10.4.11~v10.6

1 Insert the supplied CD in a CD-ROM drive.

- Double-click the CD (OLYMPUS Setup) icon on the desktop.

2 Copy the camera manual.


- Click the "Camera Instruction Manual" button to open the folder containing the camera manuals. Copy the manual for your language to the computer.

Charging the battery with the supplied USB-AC adapter

- 1 The included F-2AC USB-AC adapter (with an AC cable or plug-in type; hereafter referred to as USB-AC adapter) differs depending on the region where you purchased the camera. If you received a plug-in type USB-AC adapter, plug it directly into an AC outlet.

Example: USB-AC adapter with an AC cable

1

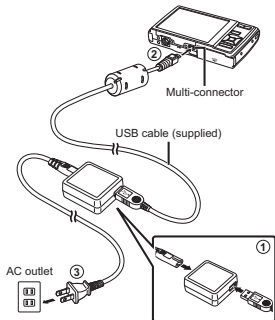

- 1 When the camera is connected to another device via USB, a message will be displayed prompting you to choose a connection type. Select [CHARGE].
- 2 The battery is not fully charged at the time of purchase. Before use, be sure to charge the battery until the indicator lamp turns off (up to 3 hours).
- 3 If the indicator lamp does not light, the camera is not correctly connected or the battery, camera, or USB-AC adapter may not be functioning as expected.

Date, time, time zone, and language

- 1 Press the ON/OFF button to turn on the camera.
- The date and time setting screen is displayed when the date and time are not set.
- 2 Use $\Delta \nabla$ to select the year for [Y].
- 3 Press \triangleright to save the setting for [Y].
- 4 As in Steps 2 and 3, use $\Delta \nabla \langle \triangleright$ and the OK button to set [M] (month), [D] (day), [TIME] (hours and minutes), and [Y/M/D] (date order).
- 5 Use $\langle \triangleright$ to select your home time zone and press the OK button.
- Use $\Delta \nabla$ to turn daylight saving time ([SUMMER]) on or off.
- 6 Use $\Delta \nabla \langle \triangleright$ to select your language and press the OK button.

Shooting with the optimum aperture value and shutter speed [PROGRAM AUTO]

- 1 Press the ON/OFF button to turn on the camera.
- 1 If the [PROGRAM AUTO] indicator is not displayed, press the OK button to display the function menu and then set the shooting mode to P.
- 1 Press the ON/OFF button again to turn off the camera.
- 2 Hold the camera and compose the shot.
- 3 Press the shutter button halfway down to focus on the subject.
- When the camera focuses on the subject, the exposure is locked (shutter speed and aperture value are displayed), and the AF target mark changes to green.
 - The camera was unable to focus if the AF target mark flashes red. Try focusing again.
- 4 To take the picture, gently press the shutter button all the way down while being careful not to shake the camera.

Using the flash

- 1 Select the flash option in the shooting function menu.
- 2 Use $\langle \triangleright$ to select the setting option, and press the OK button to set.

Viewing images

- 1 Press the \triangleright button.
- 2 Use $\langle \triangleright$ to select an image.

Erasing images during playback (Single image erase)

- 1 Display the image you want to erase and press ∇ (U).
- 2 Press $\Delta \nabla$ to select [ERASE], and press the OK button.

EN SAFETY PRECAUTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL.



An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.



DANGER

If the product is used without observing the information given under this symbol, serious injury or death may result.



WARNING

If the product is used without observing the information given under this symbol, injury or death may result.



CAUTION

If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result.

WARNING!

TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

General Precautions

Read All Instructions — Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.

Cleaning — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.

Attachments — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.

Water and Moisture — For precautions on products with weatherproof designs, read the weatherproofing sections.

Location — To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket.

Power Source — Connect this product only to the power source described on the product label.

Lightning — If a lightning storm occurs while using a USB-AC adapter, remove it from the wall outlet immediately.

Foreign Objects — To avoid personal injury, never insert a metal object into the product.

Heat — Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

Handling the Camera



WARNING

- Do not use the camera near flammable or explosive gases.
- Do not use the flash and LED on people (infants, small children, etc.) at close range.
 - You must be at least 1 m (3 ft.) away from the faces of your subjects. Firing the flash too close to the subject's eyes could cause a momentary loss of vision.
- Keep young children and infants away from the camera.
 - Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:
 - Becoming entangled in the camera strap, causing strangulation.
 - Accidentally swallowing the battery, cards or other small parts.
 - Accidentally firing the flash into their own eyes or those of another child.
 - Accidentally being injured by the moving parts of the camera.
- Do not look at the sun or strong lights with the camera.
- Do not use or store the camera in dusty or humid places.
- Do not cover the flash with a hand while firing.
- Use SD/SDHC memory cards only. Never use other types of cards.

If you accidentally insert another type of card into the camera, contact an authorized distributor or service center. Do not try to remove the card by force.



CAUTION

- Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.
 - Never remove the batteries with bare hands, which may cause a fire or burn your hands.
- Never hold or operate the camera with wet hands.
- Do not leave the camera in places where it may be subject to extremely high temperatures.
 - Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the charger or USB-AC adapter if it is covered (such as a blanket). This could cause overheating, resulting in fire.
- Handle the camera with care to avoid getting a low-temperature burn.
 - When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:
 - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may be caused.
 - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.
- Be careful with the strap.
 - Be careful with the strap when you carry the camera. It could easily catch on stray objects and cause serious damage.

Battery Handling Precautions

Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shocks or burns.

DANGER

- The camera uses a lithium ion battery specified by Olympus. Charge the battery with the specified USB-AC adapter or charger. Do not use any other USB-AC adapters or chargers.
- Never heat or incinerate batteries.
- Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, fasteners, etc.
- Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.
- To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way, solder, etc.
- If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.
- Always store batteries out of the reach of small children. If a child accidentally swallows a battery, seek medical attention immediately.

WARNING

- Keep batteries dry at all times.
- To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.
- Insert the battery carefully as described in the operating instructions.
- If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.
- Do not use a battery if it is cracked or broken.
- If a battery leaks, becomes discolored or deformed, or becomes abnormal in any other way during operation, stop using the camera.
- If a battery leaks fluid onto your clothing or skin, remove the clothing and flush the affected area with clean, running cold water immediately. If the fluid burns your skin, seek medical attention immediately.
- Never subject batteries to strong shocks or continuous vibration.

CAUTION

- Before loading, always inspect the battery carefully for leaks, discoloration, warping, or any other abnormality.
- The battery may become hot during prolonged use. To avoid minor burns, do not remove it immediately after using the camera.
- Always unload the battery from the camera before storing the camera for a long period.

For customers in North and South America

For customers in USA

Declaration of Conformity

Model Number : FE-5050

Trade Name : FE-4050

Responsible Party : OLYMPUS

Address : **OLYMPUS IMAGING AMERICA INC.**

3500 Corporate Parkway, P.O. Box 610,

Center Valley, PA 18034-0610, U.S.A.

Telephone Number : 484-896-5000

Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

For customers in Canada

This Class B digital apparatus complies with Canadian ICES-003.

Trademarks

- IBM is a registered trademark of International Business Machines Corporation.
- Microsoft and Windows are registered trademarks of Microsoft Corporation.
- Macintosh is a trademark of Apple Inc.
- SDHC logo is a trademark.
- All other company and product names are registered trademarks and/or trademarks of their respective owners.
- The standards for camera file systems referred to in this manual are the "Design rule for Camera File system/DCF" standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).

OLYMPUS

<http://www.olympusamerica.com/>

OLYMPUS IMAGING AMERICA INC.

3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Tel. 484-896-5000

Technical Support (USA)

24/7 online automated help:
<http://www.olympusamerica.com/support>
Phone customer support:
Tel, 1-888-553-4448 (Toll-free)

Our phone customer support is available from 8 am to 10 pm (Monday to Friday) ET
<http://olympusamerica.com/contactus>

Olympus software updates can be obtained at:
<http://www.olympusamerica.com/digital>
To find the nearest Service Centers, please visit:
<http://www.olympusamerica.com/digital>, and click on the Worldwide Warranty icon at the bottom of the page.

Service Centers

U.S.A.:

California **Olympus Imaging America Inc.**
10805 Holder Street Suite 170
Cypress, CA 90630-5145
Tel: (888) 553-4448

New York **Olympus Imaging America Inc.**
400 Rabro Drive
Hauppauge, NY 11788-4258
Tel: (888) 553-4448

Canada: **Olympus Canada Inc.**
Consumer Products Group
151 Telson Road
Markham, Ontario Canada L3R 1E7
Tel: (888) 553-4448

Mexico: **Olympus Imaging de Mexico S.A. de C.V.**
WTC Mexico, Montecito
No.38 -planta baja local 12
Col. Napolés, Mexico D.F. 03810
Tel: (+52 55) 9000-1280 / 9000-1281
Fax: +52 55 9000 3106

Argentina: **Jesus Labrador**
Paraguay 755 PB, C1057AAJ - Buenos Aires
Tel: (011) 4313-3174 Fax: (011) 4312-5239
E-Mail: olympus@jesuslabrador.com.ar
Jesus Labrador
Sucursal Mitre, Bartolome Mitre 860
C1036AA P - Buenos Aires
Tel: (011) 4331-1227 Fax: (011) 4331-1247
E-mail: olympus@jesuslabrador.com.ar

Brazil: **Olympus Optical do Brasil Ltda.**
Rua do Rocio 430 - 2 andar - Vila Olimpia
CEP 04552-906 - São Paulo - Brasil
Tel: 0 800 72 66 72 0
Fax: +55 11 3046-6412
E-mail: sac@olympus.com.br

Chile:

REIFSCHNEIDER S.A.
Avenida Nueva Costanera #3803
- Vitacura - Santiago - Chile
Tel: (562) 9538513 / (562) 9538514 /
(562) 9538515
Fax: (562) 6781207
E-mail: serviciotecnico@reifschneider.cl
olympus@reifschneider.cl

Colombia:

CV Tronica LTDA
Calle 68 No 12-32, Bogota
Tel: (0571) 235-7260/348-1573
Fax: (0571) 348-1574
E-mail: servicio@cvtronica.com
CV Tronica LTDA
Cra 9 No 23-49 Local 215
C.C Intercentro, Bogota
Tel: (0571) 284-4365

CV Tronica LTDA
Av. Cra 15 No 105A-22 Piso 2
Local 5, Bogota
Tel: (0571) 637 4540 - 619 1682
CV Tronica LTDA
Circular cuarta 72 - 12 B,
Laureles - Medellin
Tel: (0574) 250 - 0229

Costa Rica:

Olympus de Costa Rica, Ltda.
Forum 1, Edificio A, 2do, piso,
Santa Ana, San Jose.
Tel: (506) 2204-8000
Fax: (506) 2204-7229
E-mail: OCRL@olympus.com
Panama: **TECNOTEK**
Centro Comercial Multimax
Via Ricardo J. Alfaro, Local #14
Apartado 0831-00333 Bethania,
Panama
Tel: 507-279-8400
Fax: 507-279-8479
E-mail: tecnotek@tecnotek.com

Peru:

ELECTRONICA LAU SI
Av. Oscar R. Benavides 4703
CALLAO/Ex-Av. Colonial/Lima, Peru
Tel: (511) 6197697 / (511) 6197698
Fax: (511) 6288535
E-mail: olympus@elausi.com
ELECTRONICA LAU SI
Av. Carlos Izaguirre 1334
LOS OLIVOS, Lima, Peru
Tel: (511) 6523303
Fax: (511) 6288535
E-mail: olympus@elausi.com

ELECTRONICA LAU SI
Av. Petit Thouars 5356
C.C. CompuPalace - Tda, 207
MIRAFLORES, Lima, Peru
Tel: (511) 2418029
Fax: (511) 6288535
E-mail: olympus@elausi.com

Uruguay:

Fotocamera S.R.L.
Rondeau 1470 Montevideo
Tel: (02) 900-2004 Fax: (02) 900-8430
E-mail: FOTOCAM@ADINET.COM.UY

Venezuela:

Micron Service C.A.
Edificio America, Piso 1
Entrada Este
4ta Transversal Horizonte
Caracas 1070-A
Tel: (212) 239 8754
Fax: (212) 237 6959
E-mail: serviciotecnico@micron.com.ve

© 2010 OLYMPUS IMAGING CORP.

Printed in Indonesia